



# **BEDIENUNGSANLEITUNG**

## ***INSTRUCTION SHEET***

**Für TECHART Diffusor für 9Y0 ab MJ18 mit AHK**  
***For TECHART Diffusor for 9Y0 as of MY18 with trailer hitch***



### 1. Demontage Diffusor

1. Zwei Klemmstifte mit einem Geldstück von der Unterseite entriegeln.

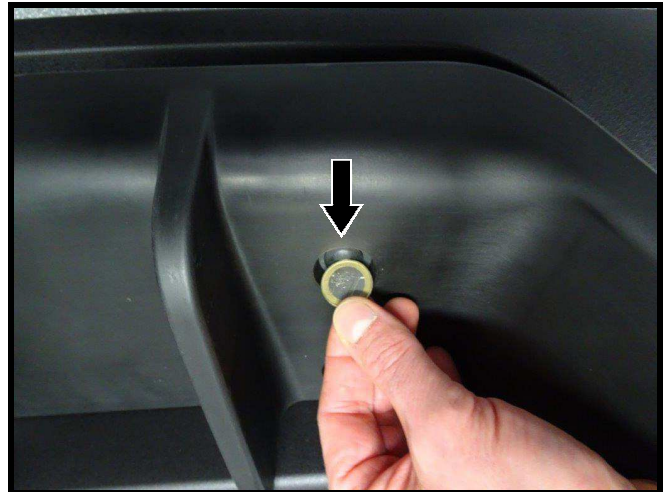


Abb. 01

Oder:

Mit einem Schraubendreher entriegeln.



Abb. 02

2. Die beiden Klemmstifte aus dem TECHART Diffusor herausnehmen und den TECHART Diffusor nach hinten ziehen.

**i** TECHART Diffusor so lagern, dass er nicht beschädigt wird.

3. Montage in umgekehrter Reihenfolge.

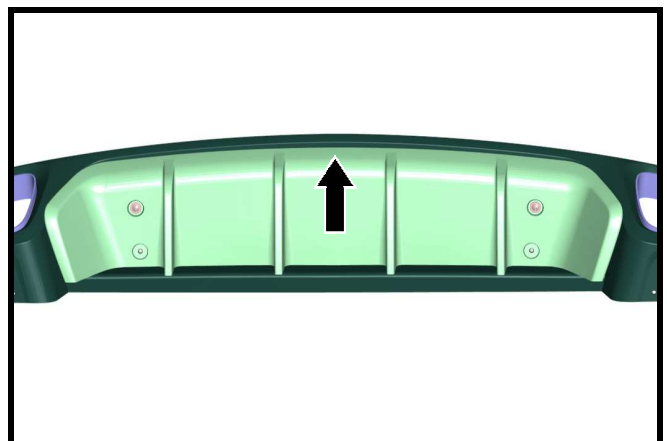


Abb. 03

### 2. Dismantling the diffusor

1. Unlock the two clamping bolts from the bottom with a coin.

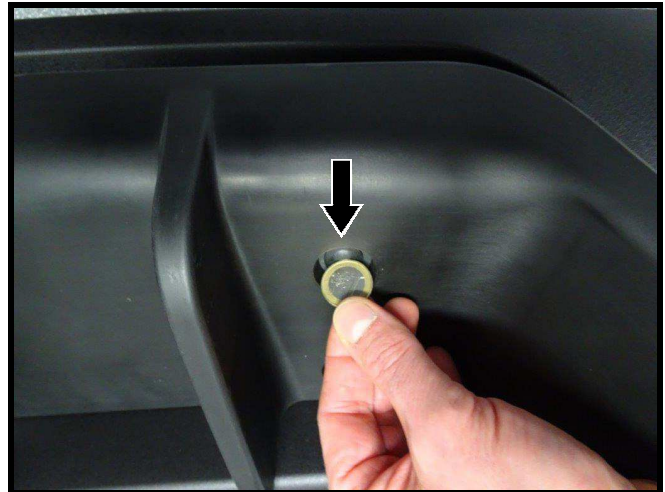


Fig. 01

or:

unbolt with a screwdriver.



Fig. 02

2. Remove both clamping bolts from the TECHART diffusor and pull the TECHART diffusor towards the back.

**i** Store the TECHART diffusor in such way that it won't get damaged.

3. Install in reverse order.

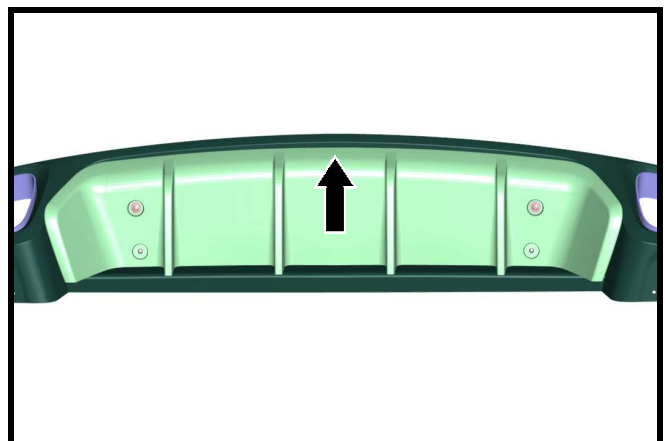


Fig. 03



# MONTAGEANLEITUNG

**TECHART Aerokit für 991 Turbo**



**TECHART AUTOMOBILDESIGN GMBH**

RÖNTGENSTRASSE 47  
71229 LEONBERG / GERMANY

TEL +49 7152 / 9339- 0

FAX +49 7152 / 9339-33

info@techart.de

www.techart.de

Änderungen und Irrtümer vorbehalten.  
*Subject to change at any time without prior notice.*  
Copyright 2018 by **TECHART** Automobildesign GmbH

Artikel-Nr./Part No. 058.100.502.099B