



ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest


for 9YA Cayenne E3 as of MY18

Part-no. 09Y.460.401.009 Pedal-Kit (Tiptronic) silver anodized

Part-no. 09Y.460.451.009 Pedal-Kit (Tiptronic) hard anodized

Part-no. 09Y.460.402.009 Footrest LHD

Part-no. 09Y.460.452.009 Footrest hard anodized LHD

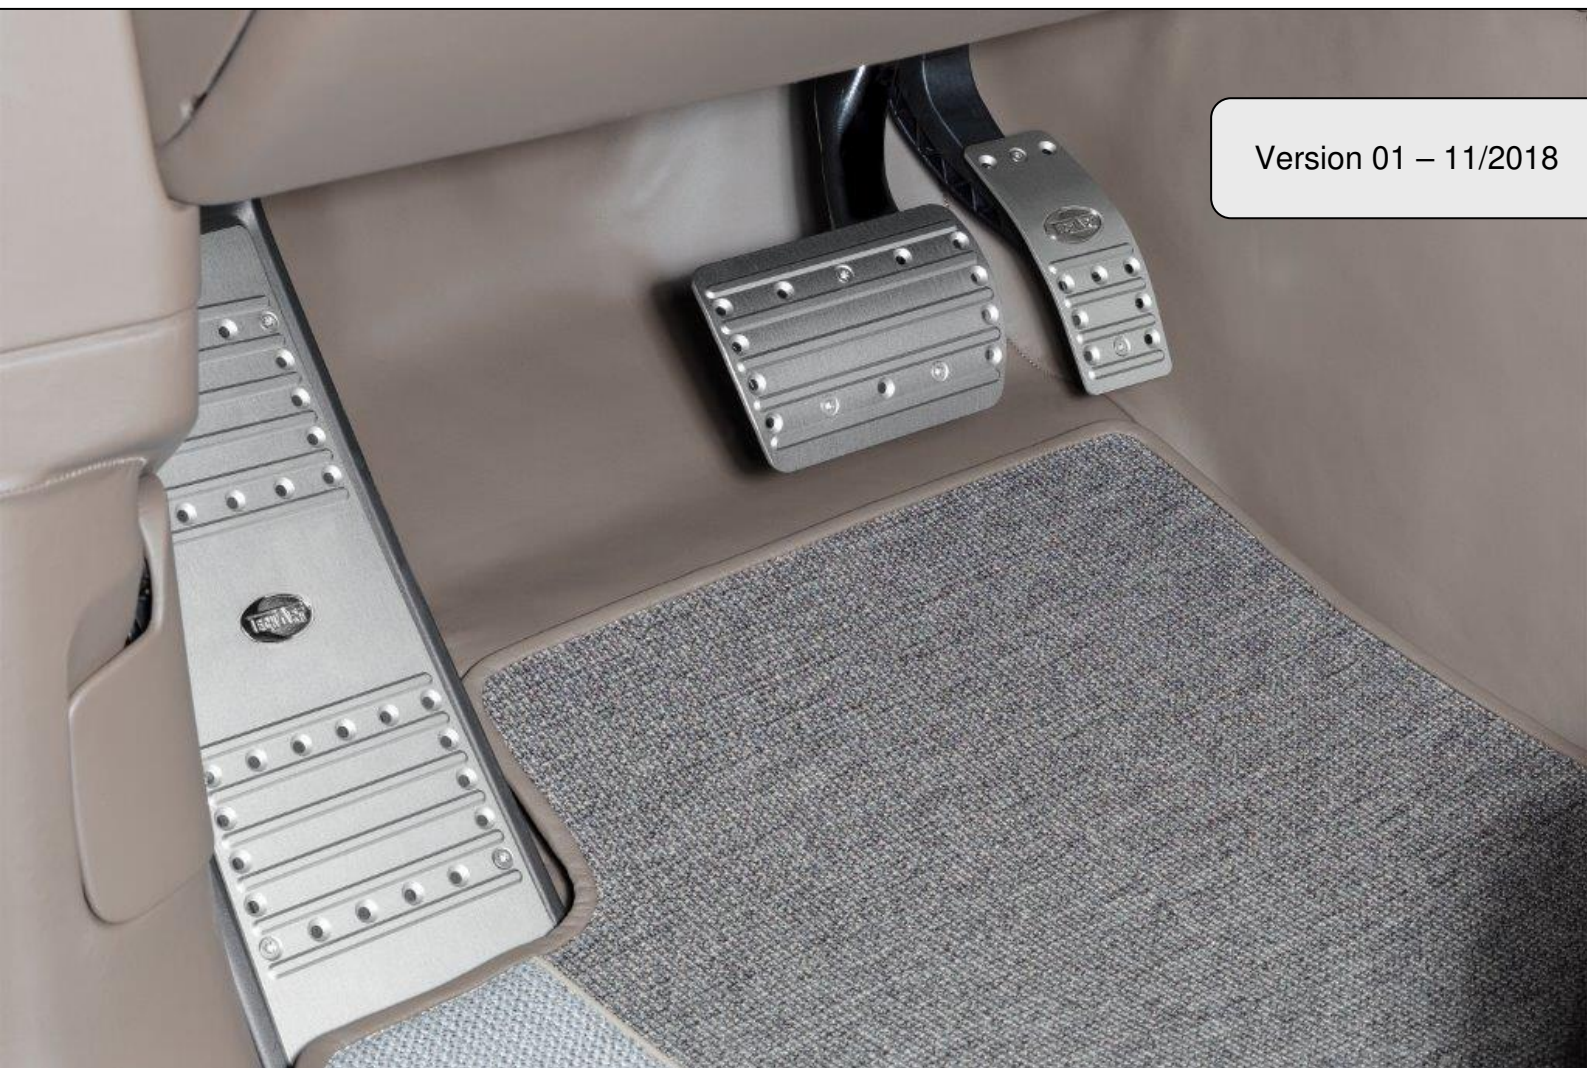

Version 01 – 11/2018



ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest

Contents

Contents	2
I Important safety information	3
II Preparation	5
1 Check parts for completeness	5
III Installation	6
1 VPreparation	6
2 Install TECHART accelerator pedal	6
3 Install TECHART brake pedal	7
4 Install TECHART footrest.....	7

















ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest

I Important safety information








All of the necessary work must be performed by qualified persons with an appropriate level of expertise.

	<p style="text-align: center;"> WARNING</p> <p>Risk of injury from electric current.</p> <p>Switch off the ignition and disconnect the battery when working on the vehicle electrical/electronics systems.</p>	
   	<p style="text-align: center;"> WARNING</p> <p>Risk of fire and explosion from ignition of windshield cleaning agents/antifreeze and their vapors.</p> <p>Risk of poisoning from ingesting windshield cleaning agents/antifreeze and breathing in their vapors.</p> <p>Risk of injury due to irritation caused by windshield cleaning agents/antifreeze coming into contact with eyes, skin and other parts of the body.</p> <p>Wear protective clothing and safety glasses. Avoid naked flames, fire and sources of ignition. Avoid contact with eyes, skin and other parts of the body. Do not eat, drink or smoke when handling windshield cleaning agents/antifreeze. Do not breathe in vapors and ensure adequate ventilation. Keep windshield cleaning agents/antifreeze only store them in sealable original containers.</p> <p style="text-align: center;">  </p>	  



ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest

 	<p style="text-align: center;"> CAUTION</p> <p>Risk of injury from hands and arms being crushed, cut or lacerated when working with sharp-edged and bulky objects.</p> <p>Wear protective clothing and protective gloves. Keep limbs out of narrow and inaccessible areas of the vehicle and/or avoid dangerous situations by using special tools and suitable aids.</p>	 
	<p style="text-align: center;">NOTICE</p> <p>Before starting the assembly procedure, carefully read the assembly instructions in full and pay attention to the safety information and sequence of the individual operation steps.</p>	
	<p style="text-align: center;">NOTICE</p> <p>All body parts must be prepared and painted in accordance with the attached painting guide.</p>	



ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest

II Preparation

Number of people required



The installation of this product can be performed by one person.

Help and support

If you have any technical queries, please contact us immediately:
support@techart.de

1. Check parts for completeness

Quantity	Part Number	Description
1	09Y1.460.4_1.009	TECHART Pedal-Kit (Tiptronic)
Consisting of:		
1	09Y.460.400.200_	Aluminum pedal, accelerator
1	048.460.400.211_	Aluminum pedal brake Tiptronic
2	0039003.9X133913	Sheet metal screw countersunk Torx 3.9X13 A2
3	001900MT04X167176	Screw countersunk Torx M4x16
3	001900M04X12	Washer 4.3x12x1.25
3	001900M03684	Hexagon nut self-locking, M 4 galvanized

Quantity	Part Number	Description
1	09Y.460.4_2.009	TECHART Footrest LHD
Consisting of:		
1	09Y.460.402.100_	Aluminum-Footrest
4	0039003.9X133913	Sheet metal screw countersunk Torx 3.9X13 A2

Please use the table to check whether all of the required parts are present.

Once parts have been removed from their original packaging, ensure that they are properly handled and stored.



ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest

III Installation

1. Preparation

- 1 Remove the original rubber cover from the accelerator and brake pedals.

2. Install TECHART accelerator pedal

- 1 Attach the TECHART pedal 09Y.460.400.200_ (1) to the original pedal and align, Mark the fixing holes and drill 2.5mm.
- 2 Fasten the TECHART accelerator pedal (1) with the enclosed plastic screws 3.9x13.

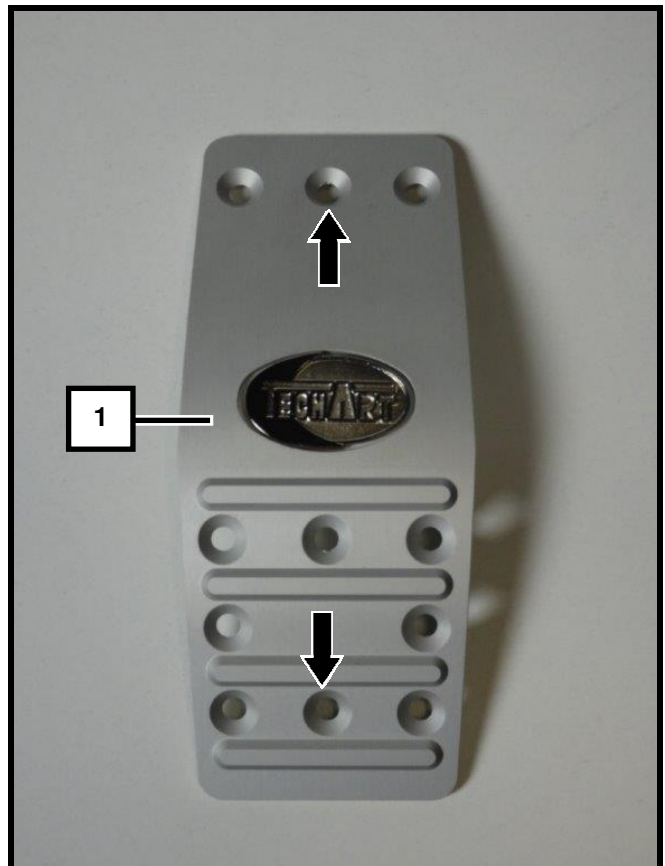


Fig. 01



ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest

3. Install TECHART brake pedal

- 1 Attach and align the TECHART brake pedal 048.460.400.211_ (2) to the original pedal. Mark the fixing holes and drill to 5mm.
- 2 Fasten the TECHART brake pedal (2) with the enclosed screws M4x16, washers M4 and nuts M4 self-locking.

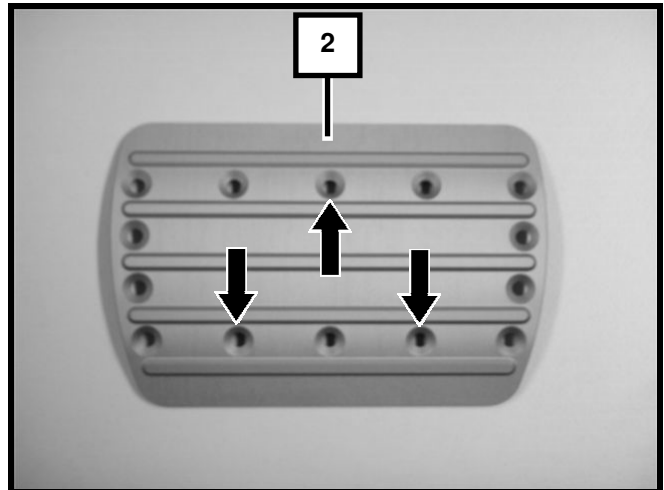


Fig. 02

4. Install TECHART footrest

- 1 Attach and align the TECHART footrest LHD 09Y.460.402.100 (3) to the original footrest. Mark the fixing holes and drill 2.5mm.
- 2 Tighten the TECHART footrest with the screws 3.9x13mm.

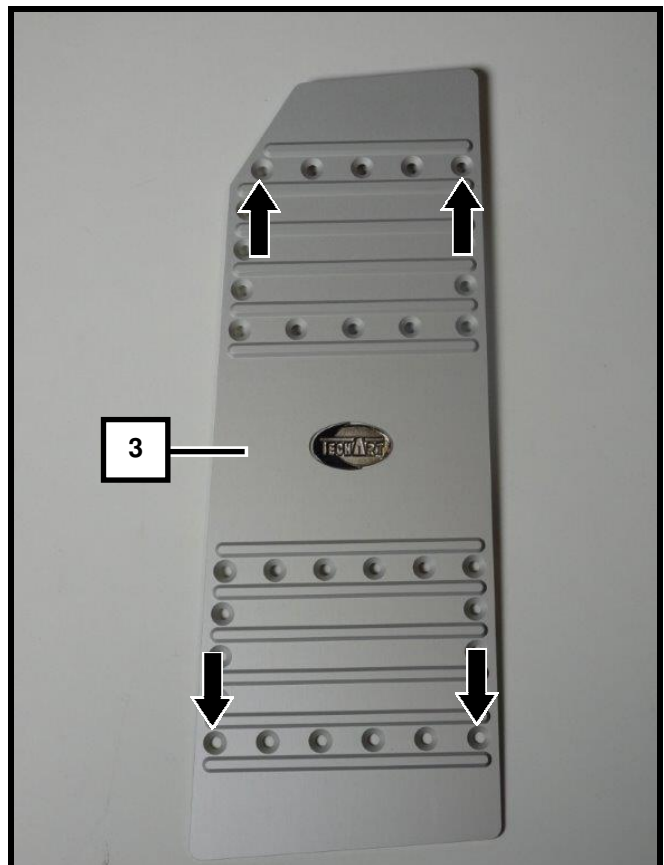


Fig. 03



ASSEMBLY INSTRUCTIONS

TECHART Pedal-Kit & Footrest



TECHART AUTOMOBILDESIGN GMBH

RÖNTGENSTRASSE 47
71229 LEONBERG / GERMANY

TEL +49 7152 / 9339- 0

FAX +49 7152 / 9339-33

info@techart.de

www.techart.de

Subject to change at any time without prior notice.
Copyright 2018 by **TECHART** Automobildesign GmbH