



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest  
for Macan

- Part no. B95.460.401.009 Pedal set**
- Part no. B95.460.451.009 Pedal set hard anodized**
- Part no. B95.460.402.009 Footrest LHD**
- Part no. B95.460.452.009 Footrest hard anodized LHD**
- Part no. B95.460.412.009 Footrest RHD**
- Part no. B95.460.462.009 Footrest hard anodized RHD**





# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

## Contents

<b>Contents</b> .....	<b>2</b>
<b>I Important safety information</b> .....	<b>3</b>
<b>II Preparation</b> .....	<b>5</b>
1 Check parts for completeness .....	5
<b>III Installation</b> .....	<b>7</b>
1 Install TECHART gas pedal .....	7
2 Install TECHART brake pedal.....	8
3 Install TECHART footrest LHD .....	9
4 Install TECHART footrest RHD.....	10

















# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

## I Important safety information








All of the necessary work must be performed by qualified persons with an appropriate level of expertise.

	<p style="text-align: center;"> <b>WARNING</b></p> <p>Risk of injury from electric current.</p> <p>Switch off the ignition and disconnect the battery when working on the vehicle electrical/electronics systems.</p>	
   	<p style="text-align: center;"> <b>WARNING</b></p> <p>Risk of fire and explosion from ignition of windshield cleaning agents/antifreeze and their vapors.</p> <p>Risk of poisoning from ingesting windshield cleaning agents/antifreeze and breathing in their vapors.</p> <p>Risk of injury due to irritation caused by windshield cleaning agents/antifreeze coming into contact with eyes, skin and other parts of the body.</p> <p>Wear protective clothing and safety glasses. Avoid naked flames, fire and sources of ignition. Avoid contact with eyes, skin and other parts of the body. Do not eat, drink or smoke when handling windshield cleaning agents/antifreeze. Do not breathe in vapors and ensure adequate ventilation. Keep windshield cleaning agents/antifreeze only store them in sealable original containers.</p> <p style="text-align: center;">  </p>	  



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

		
	<p>Risk of injury from hands and arms being crushed, cut or lacerated when working with sharp-edged and bulky objects.</p> <p>Wear protective clothing and protective gloves. Keep limbs out of narrow and inaccessible areas of the vehicle and/or avoid dangerous situations by using special tools and suitable aids.</p>	
	<b>NOTICE</b>	<p>Before starting the assembly procedure, carefully read the assembly instructions in full and pay attention to the safety information and sequence of the individual operation steps.</p>
	<b>NOTICE</b>	<p>All body parts must be prepared and painted in accordance with the attached painting guide.</p>



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

## II Preparation

### Number of people required



The installation of this product can be performed by one person.

### Help and support

If you have any technical queries, please contact us immediately:

**support@techart.de**

### 1. Check parts for completeness

Quantity	Part Number	Description
1	<b>B95.460.401.009</b>	<b>TECHART Pedal Kit silver</b>
Consisting of:		
1	B95.460.400.200	Aluminum pedal, gas
1	048.460.400.211	Aluminum pedal, brake Tiptronic
2	0039003.9X133913	Sheet-metal countersunk head screw Torx 3.9X13
3	001900MT04X1671	Countersunk head screw Torx M4x16
3	001900M04,3X12	Washer fender, M4x4.3x12x1.25
3	001900M03684	Nut self-locking M4

Quantity	Part Number	Description
1	<b>B95.460.451.009</b>	<b>TECHART Pedal Kit titanium gray</b>
Consisting of:		
1	B95.460.400.200H	Aluminum pedal, gas
1	048.460.400.211	Aluminum pedal, brake Tiptronic
2	0039003.9X133913	Sheet-metal countersunk head screw Torx 3.9X13
3	001900MT04X1671	Countersunk head screw Torx M4x16
3	001900M04,3X12	Washer fender, M4x4.3x12x1.25
3	001900M03684	Nut self-locking M4



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

Quantity	Part Number	Description
1	<b>B95.460.402.009</b>	<b>TECHART footrest silver</b>
Consisting of:		
1	058.460.402.100	Aluminum-Footrest
4	0039003.9X3893938	Self-tapping countersunk screw Torx 3.9X38

Quantity	Part Number	Description
1	<b>B95.460.452.009</b>	<b>TECHART footrest titanium gray</b>
Consisting of:		
1	058.460.412.100	Aluminum-Footrest
4	0039003.9X3893938	Self-tapping countersunk screw Torx 3.9X38

Quantity	Part Number	Description
1	<b>B95.460.412.009</b>	<b>TECHART footrest silver</b>
Consisting of:		
1	058.460.412.100	Aluminum-Footrest
4	0039003.9X3893938	Self-tapping countersunk screw Torx 3.9X38

Quantity	Part Number	Description
1	<b>B95.460.462.009</b>	<b>TECHART footrest titanium gray</b>
Consisting of:		
1	058.460.412.100H	Aluminum-Footrest
4	0039003.9X3893938	Self-tapping countersunk screw Torx 3.9X38



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

## III Installation

### 1. Install TECHART gas pedal

- 1 Fit the TECHART pedal B95.460.400.200\_ (1) onto the original pedal, align, mark the fixing holes and drill to 2.5mm.
- 2 Tighten the TECHART gas pedal (1) with the supplied plastic screws 3.9x13.

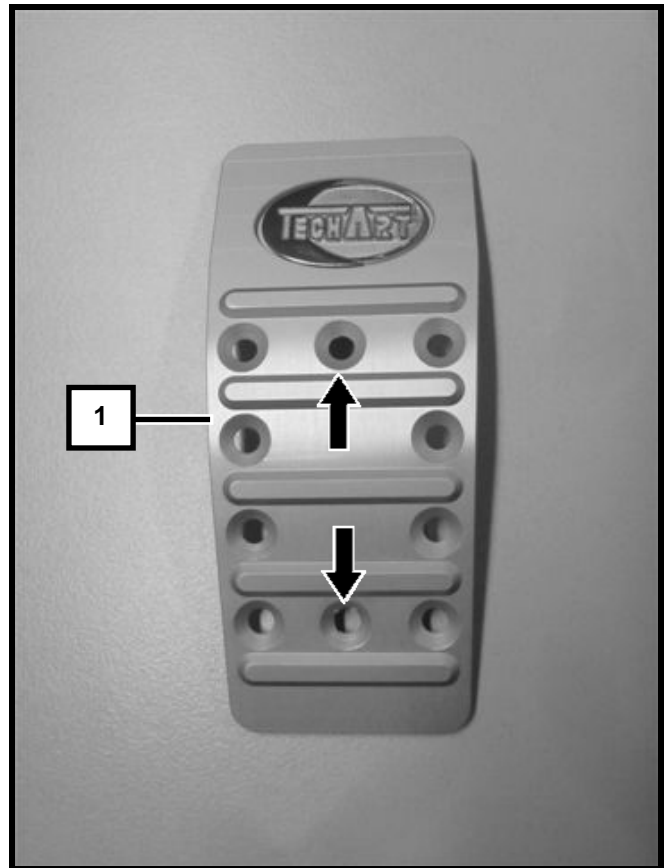


Fig. 01



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

## 2. Install TECHART Brake pedal

- 1 Fit the TECHART pedal 048.460.400.211\_ (2) onto the original pedal, align, mark the fixing holes and drill to 5mm.
- 2 Tighten the TECHART brake pedal (2) with the supplied screws M4x16 (b), washers M4 and nuts M4 self-locking.

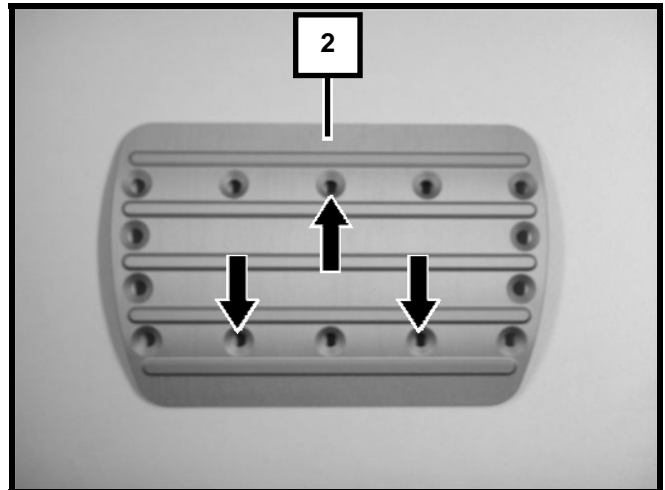


Fig. 02





# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

## 3. Install footrest LHD

- 1 Fit the TECHART footrest left-hand-drive 058.460.402.100 (3) onto the original footrest, align, mark the fixing holes and drill 2.5mm.
- 2 Tighten the TECHART footrest with the screws 3.9x38mm.

058.460.402.100 & 058.460.402.100H

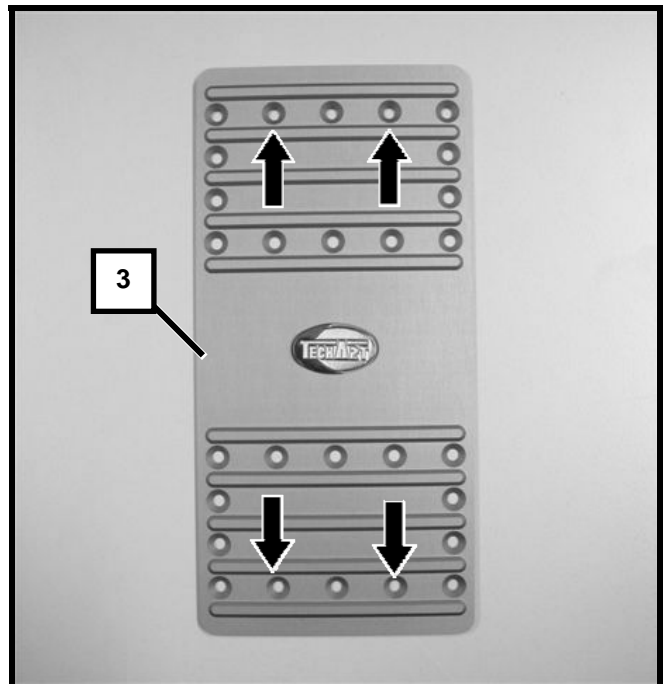


Fig. 03



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

## 4. Install footrest RHD

- 1 Fit the TECHART footrest right-hand-drive 058.460.412.100 (4) onto the original footrest, align, mark the fixing holes and drill 2.5mm.
- 2 Tighten the TECHART footrest with the screws 3.9x38mm.

**058.460.412.100 & 058.460.412.100H**

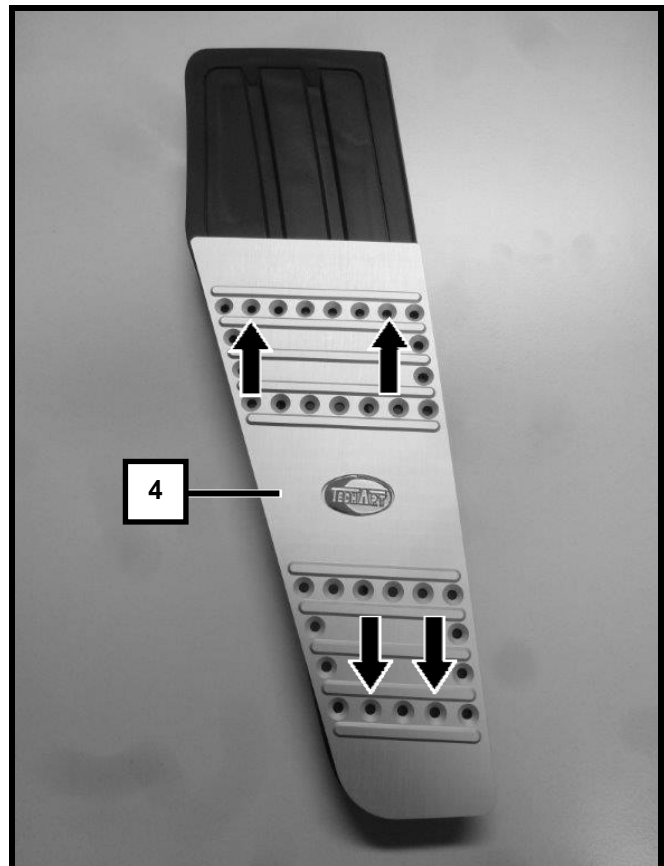


Fig. 04



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

---



# ASSEMBLY INSTRUCTIONS

TECHART Pedals and Footrest

---



**TECHART** AUTOMOBILDESIGN GMBH

RÖNTGENSTRASSE 47  
71229 LEONBERG / GERMANY

TEL +49 7152 / 9339- 0

FAX +49 7152 / 9339-33

[info@techart.de](mailto:info@techart.de)

[www.techart.de](http://www.techart.de)

*Subject to change at any time without prior notice.*  
Copyright 2016 by **TECHART** Automobildesign GmbH

Part No. B95.460.401.099