



ASSEMBLY INSTRUCTIONS

TECHART Footrest

for 971

Part-no. 071.460.402.009 Footrest LHD

Part-no. 071.460.452.009 Footrest hard anodized LHD





ASSEMBLY INSTRUCTIONS

TECHART Footrest

Contents

Contents	2
I Important safety information	3
II Preparation	5
1 Check parts for completeness	5
III Installation	6
1 Installation footrest LHD	6

















ASSEMBLY INSTRUCTIONS

TECHART Footrest

I Important safety information








All of the necessary work must be performed by qualified persons with an appropriate level of expertise.

	<p style="text-align: center;"> WARNING</p> <p>Risk of injury from electric current.</p> <p>Switch off the ignition and disconnect the battery when working on the vehicle electrical/electronics systems.</p>	
   	<p style="text-align: center;"> WARNING</p> <p>Risk of fire and explosion from ignition of windshield cleaning agents/antifreeze and their vapors.</p> <p>Risk of poisoning from ingesting windshield cleaning agents/antifreeze and breathing in their vapors.</p> <p>Risk of injury due to irritation caused by windshield cleaning agents/antifreeze coming into contact with eyes, skin and other parts of the body.</p> <p>Wear protective clothing and safety glasses. Avoid naked flames, fire and sources of ignition. Avoid contact with eyes, skin and other parts of the body. Do not eat, drink or smoke when handling windshield cleaning agents/antifreeze. Do not breathe in vapors and ensure adequate ventilation. Keep windshield cleaning agents/antifreeze only store them in sealable original containers.</p> <p style="text-align: center;">  </p>	  



ASSEMBLY INSTRUCTIONS

TECHART Footrest

 	<p style="text-align: center;"> CAUTION</p> <p>Risk of injury from hands and arms being crushed, cut or lacerated when working with sharp-edged and bulky objects.</p> <p>Wear protective clothing and protective gloves. Keep limbs out of narrow and inaccessible areas of the vehicle and/or avoid dangerous situations by using special tools and suitable aids.</p>	 
	<p style="text-align: center;">NOTICE</p> <p>Before starting the assembly procedure, carefully read the assembly instructions in full and pay attention to the safety information and sequence of the individual operation steps.</p>	
	<p style="text-align: center;">NOTICE</p> <p>All body parts must be prepared and painted in accordance with the attached painting guide.</p>	



ASSEMBLY INSTRUCTIONS

TECHART Footrest

II Preparation

Number of people required



The installation of this product can be performed by one person.

Help and support

If you have any technical queries, please contact us immediately:
support@techart.de

1. Check parts for completeness

Quantity	Part Number	Description
1	071.460.402.009	TECHART Footrest LHD
Consisting of:		
1	071.460.402.100	Aluminum-Footrest
4	0039003.9X3893938	Self-tapping countersunk screw Torx 3.9X38

Quantity	Part Number	Description
1	071.460.452.009	TECHART Footrest LHD
Consisting of:		
1	071.460.402.100H	Aluminum-Footrest
4	0039003.9X3893938	Self-tapping countersunk screw Torx 3.9X38



ASSEMBLY INSTRUCTIONS

TECHART Footrest

III Installation

1. Installation footrest 971 LL

- 1 Fit the TECHART footrest left-hand-drive 071.460.402.100 (1) onto the original footrest, align, mark the fixing holes and drill 2.5mm.
- 2 Tighten the TECHART footrest with the screws 3.9x38mm.

071.460.402.100 & 071.460.402.100H

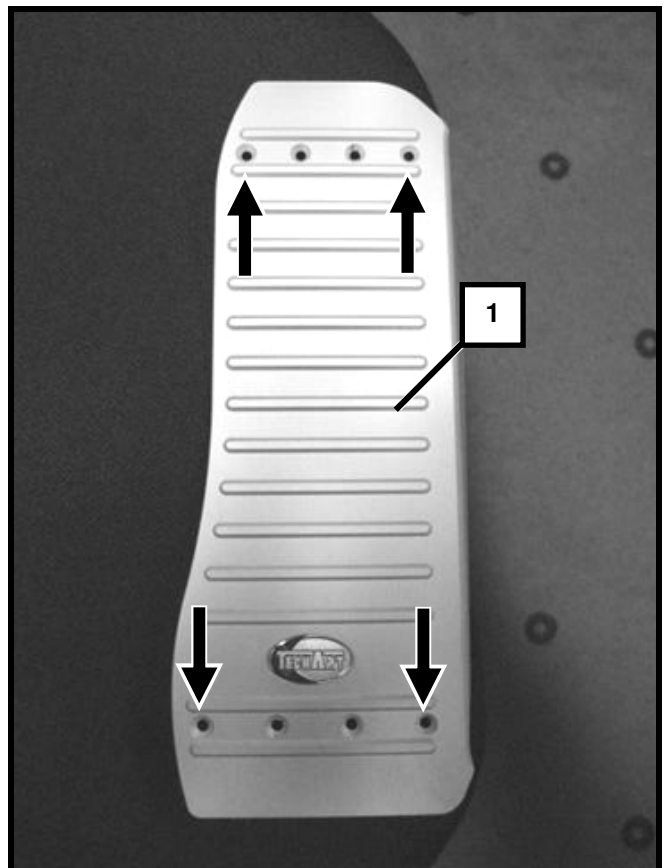


Fig. 01



ASSEMBLY INSTRUCTIONS

TECHART Footrest



TECHART AUTOMOBILDESIGN GMBH

RÖNTGENSTRASSE 47
71229 LEONBERG / GERMANY

TEL +49 7152 / 9339- 0

FAX +49 7152 / 9339-33

info@techart.de

www.techart.de

Subject to change at any time without prior notice.
Copyright 2017 by **TECHART** Automobildesign GmbH

Part No. 071.460.402.099